



**LONESTAR**  
TRACKING  
GPS TRACKING MADE EASY

# TitanLTE

## Installation Manual



**1 Locate Your IMEI** - If you were already provided a username and password, please skip to step 3. Otherwise, look at the label on your TitanLTE and take note of the IMEI number. This is needed to activate your device.

**2 Activate Your Tracker** - On your computer, visit our website at <http://www.LoneStarTracking.com> and click the "Activation" button in the upper right of the page. Fill out all the information, including the IMEI from your tracking device in step 1.

**3 Install Your Tracker** - Your TitanLTE is shipped with a wiring harness that contains multiple wires. Please locate the two (Red/Black) that have been separated from the group and are tied together. This is your Positive and Negative.

The TitanLTE requires 8v - 32v DC to power the unit. Many installs the tracker is mounted close to the battery on the asset.

**4 Route The Cable** - Use zip ties to secure the wires and route them so that they will not interfere with the normal operation of your asset.

**5 Begin Tracking** - You can now log into the tracking system from a computer by visiting our website at <http://FleetOne.LoneStarTracking.com> Enter your username and password that was sent to you when you activated or purchased your tracking device.

